



Installation RD-R, KVR-R Rules


1. Supply RD-R (KVR-R) - the bend distance

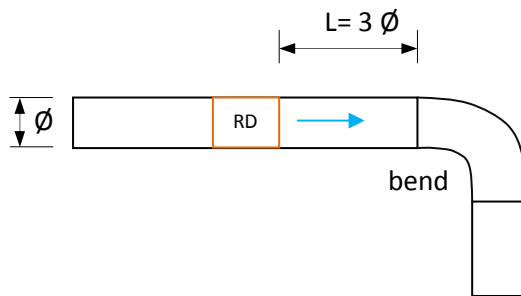


2. Exhaust RD-R (KVR-R) - the bend distance

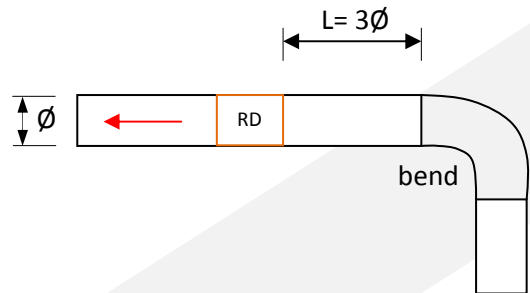


1. Supply RD-R (KVR-R) - the T-duct distance

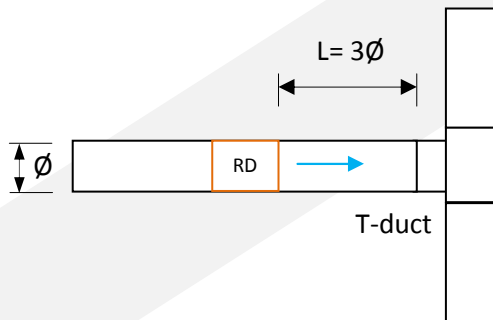


2. Exhaust RD-R (KVR-R) - the T-duct distance

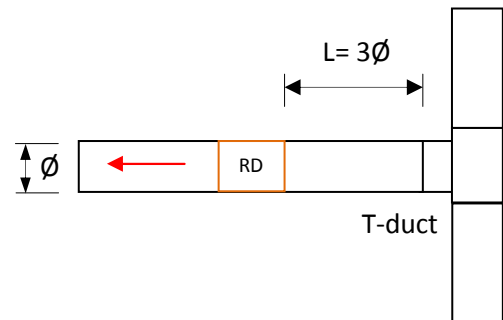

1. Supply RD-R (KVR-R) - the grill distance

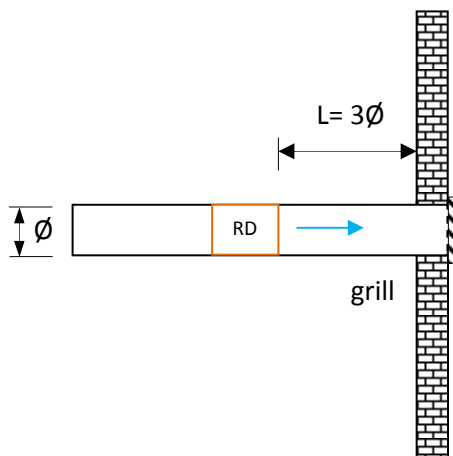

2. Exhaust RD-R (KVR-R) - the grill distance

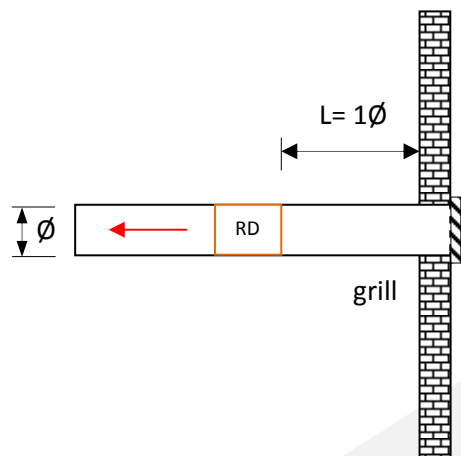

Siedziba Firmy / Head Office:

LOXIMIDE Sp. z o.o., ul. Warszawska 164, 05-082 Latchorzew/Warszawa, Polska, tel: +48 22 292 08 22, fax: +48 22 292 08 23, www.loximide.pl, office@loximide.pl, NIP 835 153 96 22, REGON100065522,